

Franchise Truck Audio and Video Instructions

- To get the sound to come through the stereo for the DVD player, the stereo must be in the AUX mode.
- This is done by pushing the source button (SRC), in the bottom left of the stereo face. Push it till the word AUX appears. If it does not, the AUX mode needs to be turned on.
- To turn on the AUX mode you need to have the stereo turned off. With the stereo off, press and hold the function button (FUNC), in the upper right corner of the faceplate, for about 3 seconds. The clock setting will appear.
- Continue to press, (but not hold) the FUNC button till the word AUX – OFF appears.
- With the words AUX – OFF displayed, go to the round dial on the right of the faceplate and press the up arrow. The words AUX – ON should be displayed.
- Now that the AUX mode is turned on, you will be able to get into it with the source (SRC) button.

- To display the Modis/Scanner or laptop on the rear monitor, you must switch the A/B box (located next to the computer stand), to what you want to display on the monitor.
- You can show what is on the Modis/Scanner by switching the A/B switch to A.
- To display what is on the laptop, you need to switch the A/B switch to B. The sound from the laptop will come out of the laptop only. Adapters are available to allow sound from the laptop to come through the stereo speakers (PN 19330025).
- Any problems with this please call LDV at 800-558-5986.