

E-track Display Shelf Assembly

Do-it-Your-Self Instructions



Parts included (Part Number)

- 2 – Black brackets (32010009)
- 2 – Chrome E-track connectors (32010022)
- 4 – 1-inch zinc bolts (38060102)
- 8 – Nylon lock nuts (38070023)
- 4 – 1 ½-inch bolts (38020038)
- 4 – Finish washer (38010012)
- 1 – Shelf (65060091)

Tools needed

- ¼-inch drill bit
- Cordless drill
- 7/16-inch nut driver or wrench
- 7/16-inch socket



Step 1:

Connect the black shelf brackets to the Chrome E-track sockets using the four 1-inch bolts and nylon lock nuts included. Tighten down till snug, but do not strip. (Fig. 1)




Step 2:

To mount brackets, you need to pull finger tab and install bottom into E-track before top. (Fig 2)



Step 3:

Install shelf on brackets and push to the back leaving approximately a ¼-inch gap between the shelf and the wall. Allow a 12-inch overhang off each end of the shelf. (Fig. 3)

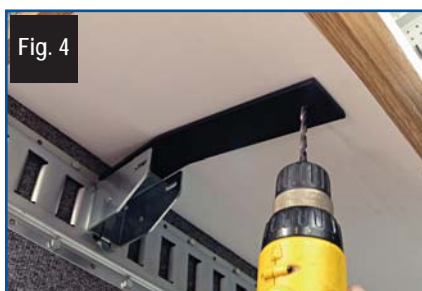

Step 4:

Drill holes in shelf using bracket as guide with a ¼-inch drill bit. Put the four remaining 1 ½-inch bolts with finish washers through shelf and tighten nylon lock nuts down securing the shelf to the brackets. (Fig. 4)

*LDV is a registered Trademark of LDV, Inc.
© Copyright LDV, Inc. 2007 All rights reserved.
Specifications are current as of 01/01/07 and
subject to change without notice.
All Trademarks are owned by their respective
companies.*



Our Experience is Your Solution

LDV, Inc. • 180 Industrial Drive • Burlington, WI 53105 • 800-558-5986 • Fax: 262-763-0270 • www.ldvusa.com

SVC-001-011507-A