

New/Featured Product Display Racks

Do-it-Your-Self Instructions



Parts

- 1 - Display rack (68160135)
- 1 - C-channel (14230126)
- 6 - 1" flat zinc screws (38020082)
- 1 - 1 1/4" S.S. screw (38030069)

Tools

- Cordless drill
- Philips adaptor for drill
- Tape measure
- White grease pencil



Step 1: Mount the top of the C-channel down 1 1/2" from your trim and centered in your tool box area. Fig. 1 Keep level!




Step 2: Make a mark above the e-track on the carpet where you would like the center of your rack to hang.

Step 3: From that center mark measure out 11 1/2" and make 2 marks, one to the right and one to the left. Fig. 2 Then measure down 15 3/8" from the bottom of the C-channel inline with the marks you previously put on the carpet.



Step 4: Remove the back door stop receivers from the back of the rack. Mount these receivers to the wall with the 1 1/4" S.S. screw where the 2 marks meet as seen in Fig 3.

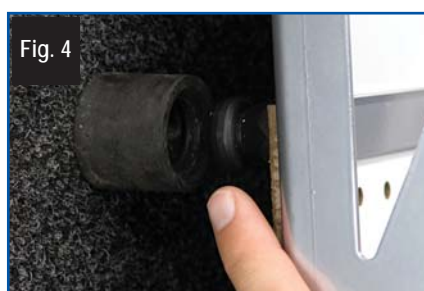

Step 5: Hang your rack in the channel so the lip of the rack hangs on the lower lip of the C-channel. Push the bottom of the rack to click the back door stops into the receivers. Fig. 4

*LDV is a registered Trademark of LDV, Inc.
© Copyright LDV, Inc. 2007 All rights reserved.
Specifications are current as of 06/01/07 and
subject to change without notice.
All Trademarks are owned by their respective
companies.*



Our Experience is Your Solution

LDV, Inc. • 180 Industrial Drive • Burlington, WI 53105 • 800-558-5986 • Fax: 262-763-0270 • www.ldvusa.com

SVC-006-060107-A