

Featured/New Product Valances

Do-it-Your-Self Instructions



Parts

- 1 - Featured Product Graphic (43030086)
- 1 - New Product Graphic (43030087)
- 1 - Clear plastic cover ()
- 1 - Aluminum trim (23050001)
- 6 - 1" silver rounds (38020102)

Tools

- Cordless drill or #1 philips
- Phillips adaptor for drill
- Razor knife
- Tape measure



NOTE: If display racks are present remove them so you have room to work and skip to step 2 or 3 depending on your ceiling.

NOTE: If you are going to install display racks, the display rack needs to be set up before proceeding with valances.



Step 1: When installing ONLY Featured/New Product Valances for both curb side and street side application measure 1½-inches down from bottom of ceiling trim as seen in (Fig. 1)

Position the bottom of the 'L-shape' aluminum trim (facing up with mounting holes on the wall) along the mark. (Fig. 2) Be sure to center the trim as needed in the tool box area. Then mount trim to wall with supplied screws.



Step 2: *If ceiling e-trays are NOT present skip to step 3.*


If ceiling e-trays are present and within five inches of near wall on either street side and curb side of truck position the 'L-shape' aluminum trim flush with the e-tray frame side closest to the near wall (NOT SHOWN). Make sure that the trim is facing down and the mounting holes are on the ceiling. Center the trim as needed and mount with screws. Skip to Step 4.



Step 3: For curb side installation (ceiling e-trays not present) position one piece of 'L-shape' aluminum trim in between the 3rd and 4th row of lace. Make sure that the trim is facing down and the mounting holes are on the ceiling nearest to the wall. Center trim to the previously wall mounted trim and mount with screws. (Fig. 3)

For street side installation (ceiling e-trays not present) position an 'L-shape' aluminum trim in between the 2nd and 3rd row of lace. Make sure that the trim is facing down and the mounting holes are on the ceiling nearest to the wall. Center trim to the previously wall mounted trim and mount with screws. (Fig. 4)

Installation instructions continued on back

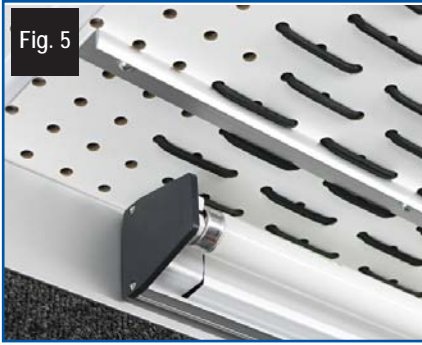

Step 4: Remove any lens covers from light fixtures that will be hidden. (Fig. 5)

Step 5: Lay the graphic on the back of the clear plastic. (NOT SHOWN)



Step 6: Lay the bottom edge of the plastic and graphic on the top side of the 'L-shape' trim / 'C-channel'. Make sure the graphic is facing the correct way. (Fig. 6)

Slowly work the top of the plastic and graphic so that it sits behind the lip of the trim you just mounted. This is a pressure fit and will be a little tricky! Best to start on one end and work it to the other end.