

Display Drawer Installation

Do-it-Your-Self Instructions



Parts

- 1 - 21-inch drawer (68160126)
- or
- 1 - 28-inch drawer (68160127)
- 4 - T-nuts (38070043)
- 4 - 1-inch Hex head bolts (38060026)
- 4 - 3/4-inch Lag bolts (38060146)

Tools

- Cordless drill
- 5/16-inch drill bit
- Rubber/plastic mallet and/or
- 7/16-inch socket & wrench or
- 7/16-inch socket adaptor
- Tape measure
- Spacer



Fig. 1

Step 1: Make sure you have enough room between stanchions if installing more than one drawer on each shelf. (Fig. 1)

See Below:

2 - 21-inch drawers = 48-inches

2 - 28-inch drawers = 62-inches

1 - 21-inch drawer and 1 - 28-inch drawer = 55-inches



Fig. 2

Step 2: Position the drawers for each shelf and determine proper spacing from wall and other drawer(s) (Fig. 2) **NOTE:** *When positioning drawers the front should be flush with the front edge of the shelves or slightly behind.* To make installation easier and more precise make a wooden spacer as a guide to properly align drawers with the rear wall and other drawers. These will vary per shelf.

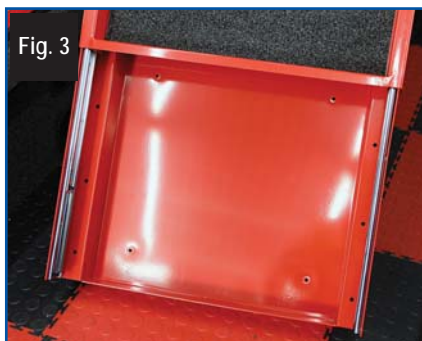


Fig. 3

Step 3: Locate the four mounting holes. (Fig. 3)




Step 4: Fully extend the drawer and base. Using your spacer(s) position the back edge of the base on the shelf closest to the wall while keeping the base tight to the shelf and to the your spacer.

Step 5: It is recommended that you begin installation on the top shelf and work your way down. Drill through base pilot holes with the 5/16-inch drill bit completely through the shelf. (Fig. 4) Begin with the holes that are the most comfortable or easily within reach.



Step 6: Tap a T-nut into the holes from the underside of the shelf until seated flush. (Fig. 5) Line up the screw holes with the T-nuts and thread in 1-inch hex head bolts by hand (to prevent cross-threading) to start. (Fig. 6) Once all four bolts are hand started, tighten down fully with a 7/16-inch socket wrench or cordless drill with a socket adaptor. (Fig. 7)

Step 7: Repeat steps 3 – 8 for remaining shelves.

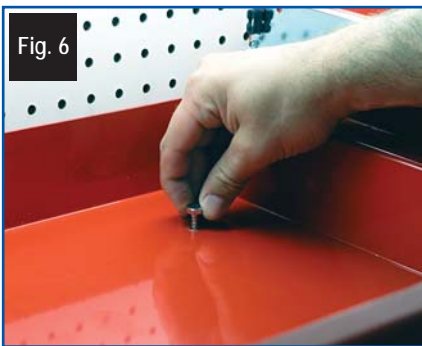

Step 8: Mounting drawers to the bottom shelf as follows: Position the drawer for mounting. Using the 4-3/4-inch hex head lag screws and 7/16-inch socket with drill, drive screws through the pre-drilled pilot holes and into the shelf.

